
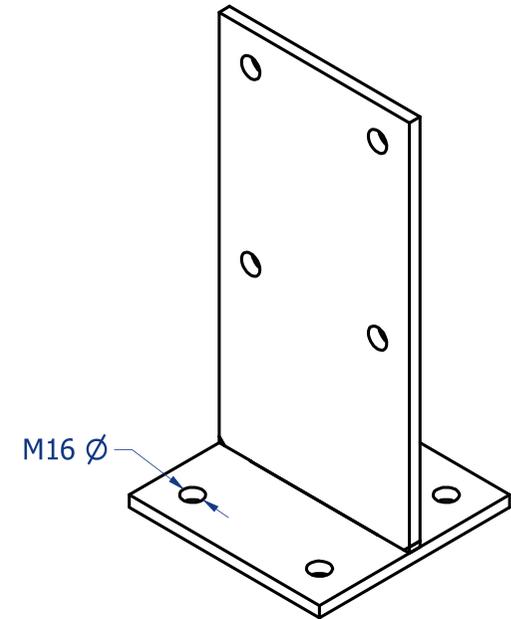
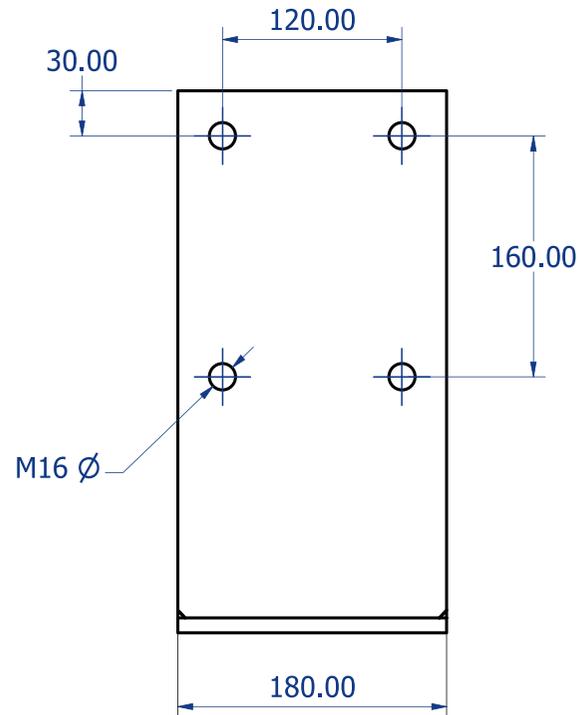


T-Blade Timber Cutting Schedule & Dimensions

In conjunction with this document we also recommend to read the T-Blade Technical Data Sheet (TDS) available on our website vuetrade.com

VBPTB180200

Post Size Suitability: 180 - 250mm square

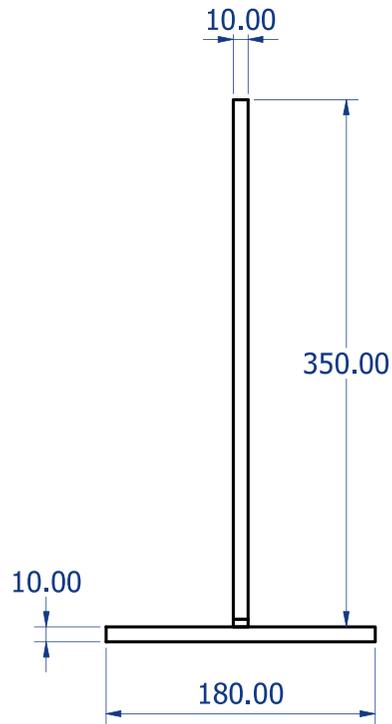

T-Blade

Timber Cutting Schedule & Dimensions

VBPTB180200

RECOMMENDED WORKFLOW:

1. Establish centre line based on timber size (**FRONT & SIDE** face)
2. Determine T-Blade Cap height (thickness)
3. Measure and cut out blade slot measured from centre line (thickness x length) (**SIDE** face)
4. Identify T-Blade height on **FRONT** face (including T-Blade cap height)
5. Measure and cut out 4x bolt holes measured from established centreline and T-Blade height (**FRONT** face)

GENERAL NOTES:

- Timber size 200 x 200 mm is for example only. Dimensions are applicable to timber sizes 180 - 250mm.
- Bolt size hole cut-out of 18mm \varnothing (metric) or 3/4" \varnothing (imperial) to suit M16 sized bolts.
- Shaded region denotes T-Blade and cap.
- **VUEBOLT M16 x 150-230mm** is the corresponding size for use with this T-Blade for timber sizes 180 - 230mm

NOTE: There is currently no corresponding VUEBOLT for timber sizes 230 - 250mm for this T-Blade.

