


# INSTALLING A T-BLADE POST SUPPORT FOR TERMITE INSPECTION

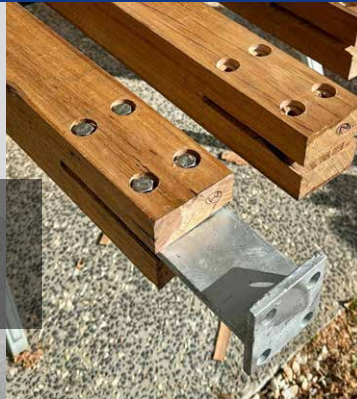

Scan here  
to access the webpage  
with interactive slider  
[vuetrade.com/t-blade/termite](http://vuetrade.com/t-blade/termite)



APR26

Images and Projects (L-R): McCallum Carpentry, Flixton Projects, Pronto Construction

For locations prone to termite activity, a **75mm clearance between timber and ground** is required by Australian Standards (AS3660.1:2014 - *Termite management, Part 1: New building work*).

The T-Blade Post Support can be installed in such a way to allow for this easier visual inspection to mitigate termite activity and damage, should your site or project require it.

To see what this looks like in comparison to the classic look with the T-Blade Post Support with a Cap, use the slider online.



VBPTB 115140



VBPTB 150180



VBPTB 180200



VBPTB 250350



See the **T-Blade Installation Guide** to be confident you know all the steps:  
[vuetrade.com/t-blade/installation](http://vuetrade.com/t-blade/installation)

A **T-Blade Cutting Schedule** is available to assist with dimensions:  
[vuetrade.com/t-blade/cutting-schedule](http://vuetrade.com/t-blade/cutting-schedule)

